

APPENDICES

The following error messages may occur with all Update Processor and Librarian commands:

SYNTAX ERROR: =	The = sign may not be used to delimit a parameter, only the value of a parameter.
SYNTAX ERROR: , OR ;	The separators comma (,) or semi-colon (;) may not be used to delimit the value of a parameter; it must be an = sign.
SYNTAX ERROR: .	The full stop (.) may not be used as a delimiter; it is only used in catalogued procedures.
BAD KEY NAME	Unrecognised keyword in a parameter.
KEY NAME XXXX REFUSED	The keyword XXXX is not accepted by the command.
PARAM XXXX REDUNDANT	The keyword XXXX is specified more than once.
PARAM MISSING	The command requires keyword XXXX to be specified.
PARAM ERR = XXXX	Parameter has an invalid value.
INVALID PARAM = XXXX	
PARAM NOT VALID	

The following error messages are specific to the Update Processor:

UNKN. COM.	Unknown command.
INPUT COMMAND I/O ERROR	
INV. DEL AFTER COMMAND	
PHASE ERROR	
DATA IN DEF. PHASE	
DATA EXPECTED INSTEAD OF COM.	
OUT FILE ASS ERR.	
OUT FILE OVF	

/01 Operator's console.
/02 Listing device (usually line printer).
/03 Punch device.
/04 Card reader (spooling).
/05 Punched paper tape reader (spooling).
/06 Plotter (spooling).

/20 to /3F EDF Processor LOAD command, temporary assignments to data subfiles.

/C0 to /CF Physical disc unit filecodes.

/D0 to /DF Temporary work files used by processors:

/D0 Input file for INC command
Input file for SORT processor
Work file for Update processor.
/D1 Output work file for Update processor
Output file for SORT processor.
/D3 UF output file from Update processor.
/D4 SC output file from Update processor
SC input file to Assembler and Fortran (OPT PROG=/D4).
/D5 OB output from ASM and FRT
OB input to Linkage Editor.
/D6 LM output from Linkage Editor
Work file 1 for SORT processor
Work file for index generation (EDF LOAD with IGEN=YES).
/D7 System object library for Linkage Editor
Work file 2 for SORT processor
Work file for index generation (EDF LOAD with IGEN=YES)
Auxiliary work file for Update processor.
/D8 User object library for Linkage Editor.

/E0 to /EF Input filecodes:

/E0 Control command input
/E1 ASCII input (default in ASM OPT statement)
/E2 Binary input (default in INC command for Linkage Editor)
/EE Control command input from a catalogued procedure.

/F0 to /FF DAD filecodes (the system DAD is /F0).

P800 Programmer's Guide 3 Vol. III: Software Processors

12NC: 5122 991 28384

Name _____ Date _____

Company _____

Address _____

Telephone Number _____ Extension _____

Comments or Suggestions:

